


# 卡特C4.2

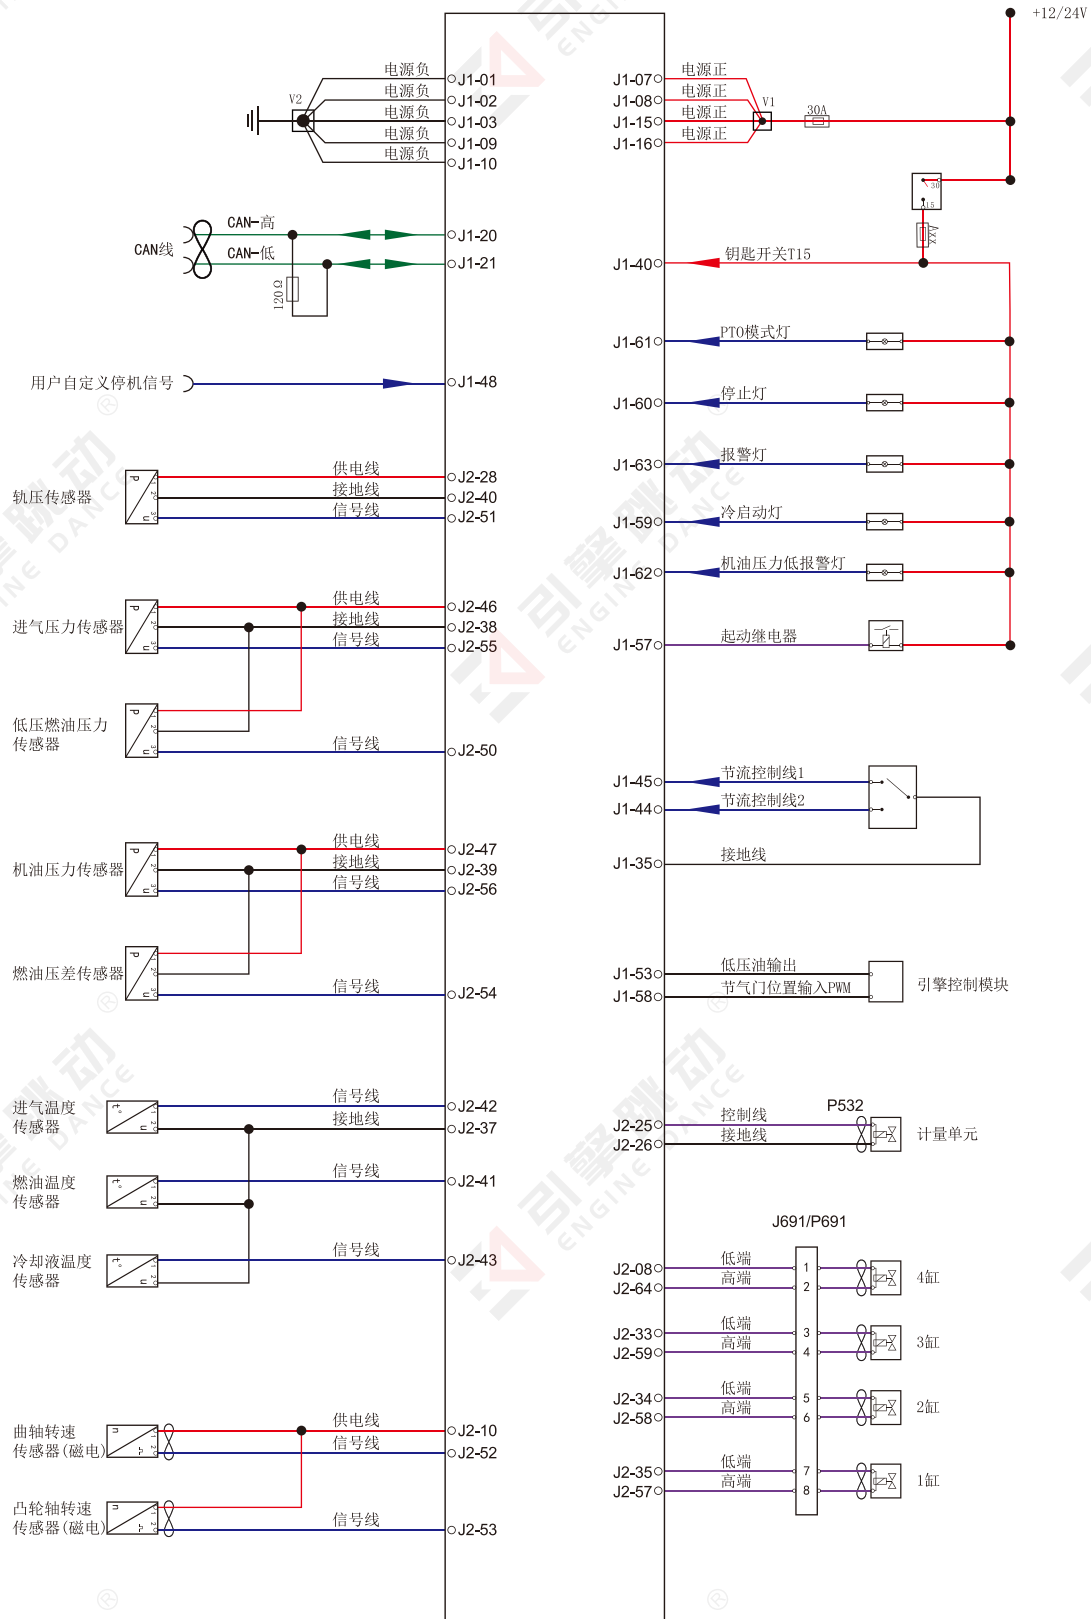

- 如需单独给ECU上电, 需要给J1-07/J1-08/J1-15/J1-16接电源正, J1-01/J1-02/J1-03/J1-09/J1-10接电源负, T15端子J1-40接电源。
- 如诊断仪无法连接, 可尝试跳线: 诊断仪供电以及搭铁线连接好, 从ECU上CAN线J1-20/J1-21单拉线接入诊断仪诊断口对应针脚。